



### Locking cylinder (Z4) HZ, HZ,DK/MR

Z54.0.90536  
18.09.2024

 
DE Kurzanleitung  
EN Quick guide  
FR Guide abrégé  
NL Korte handleiding  
IT Guida breve  
DK Korte vejledning  
SE Snabbguide




### 3. Variants

































































### 5. Installing the HZ cylinder

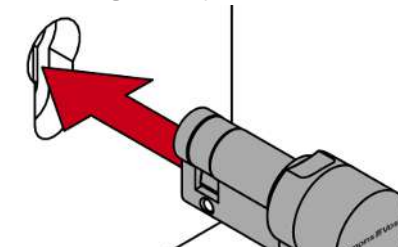

### 6. Installing the HZ DK cylinder

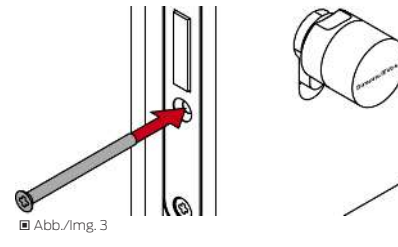 

### 7.2 Battery replacement (passive/hybrid cylinder)

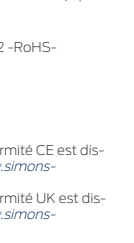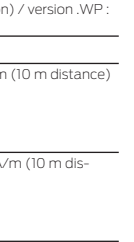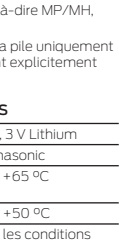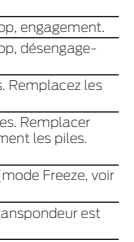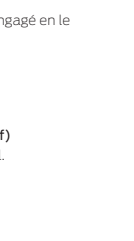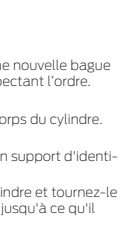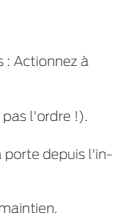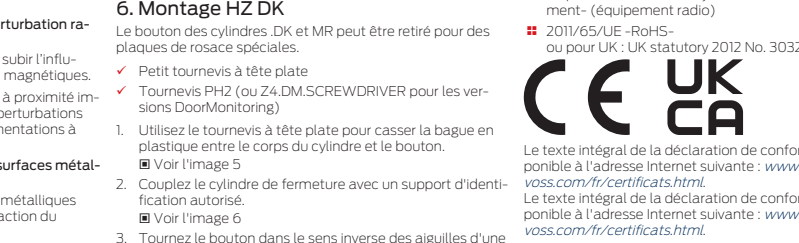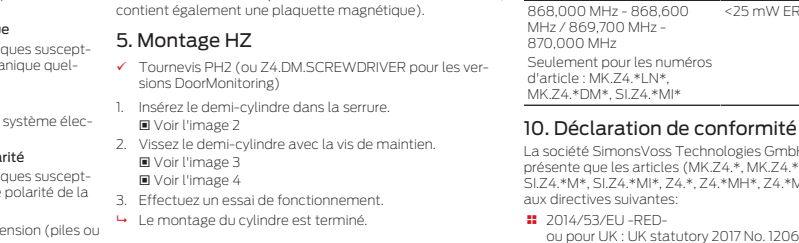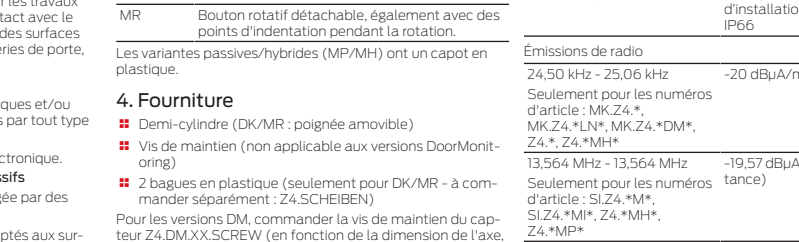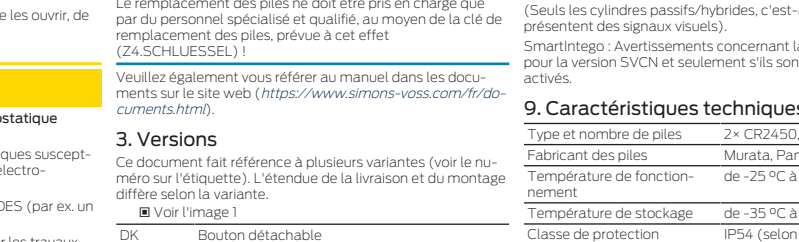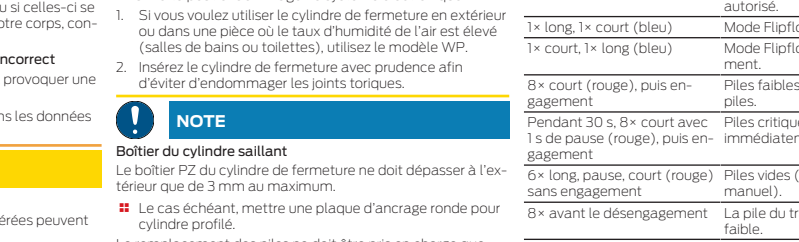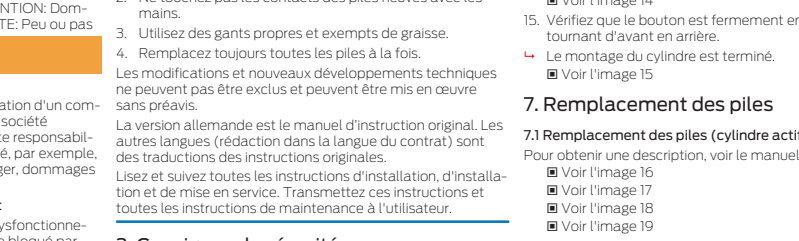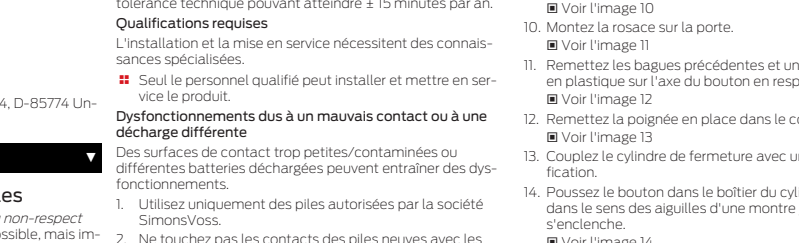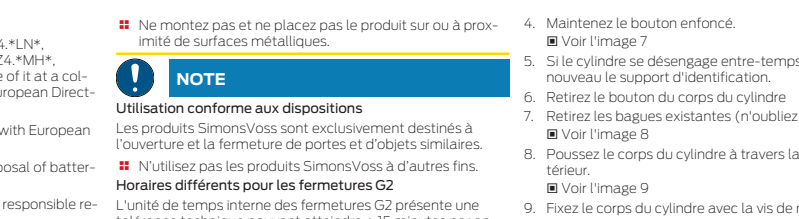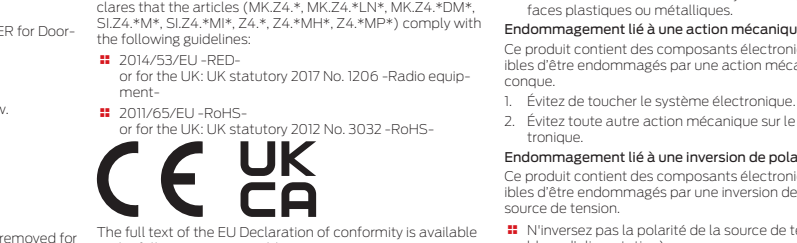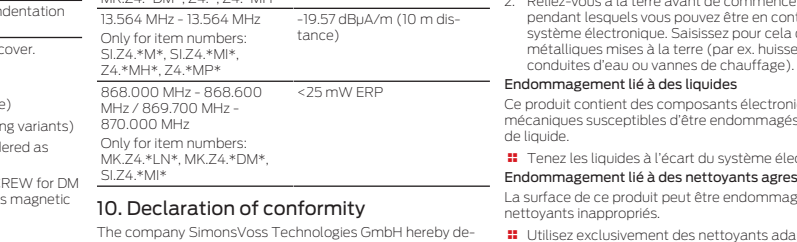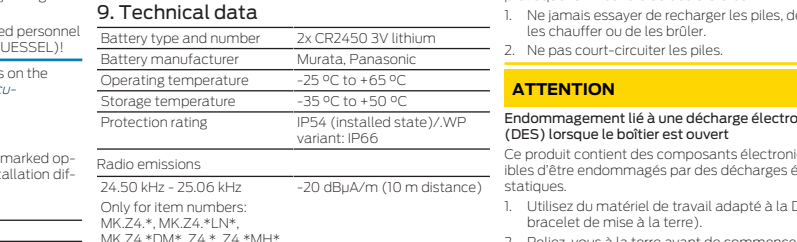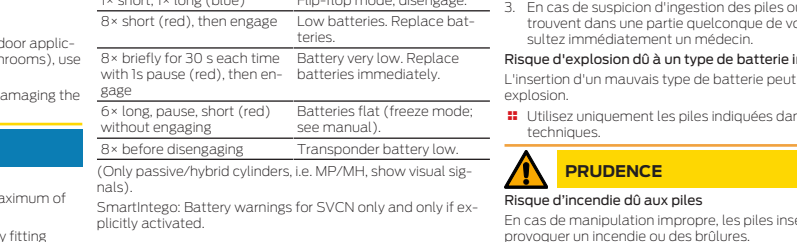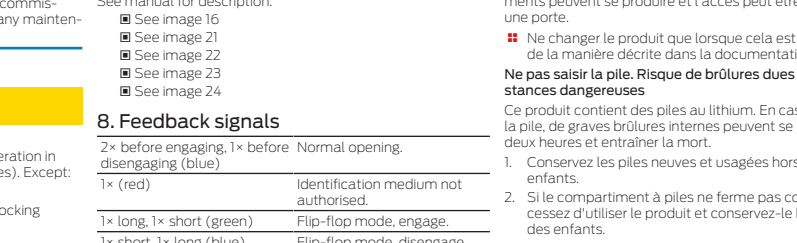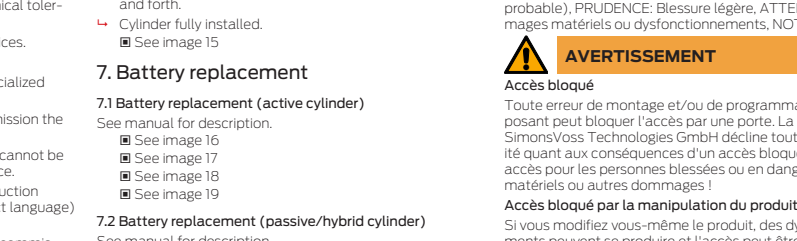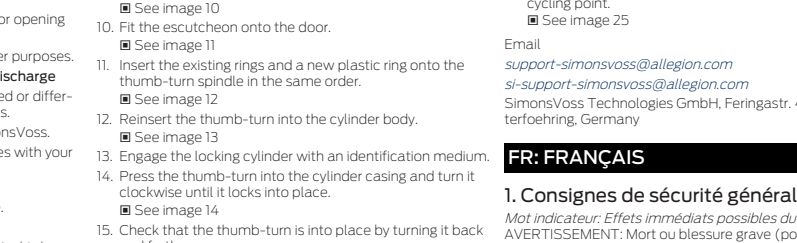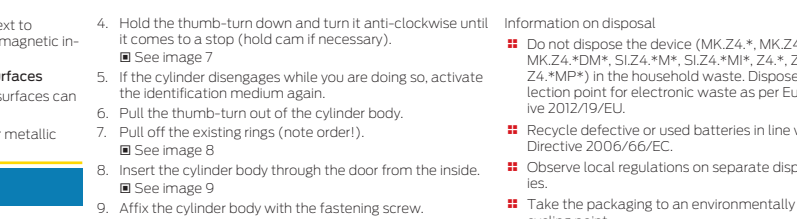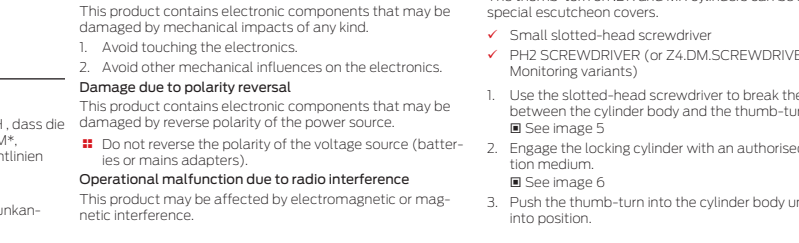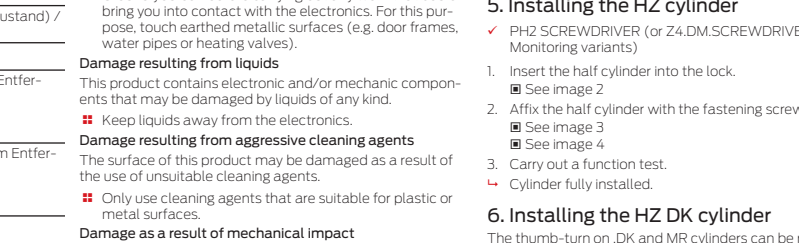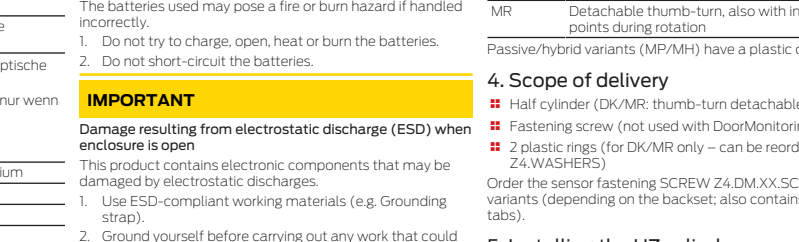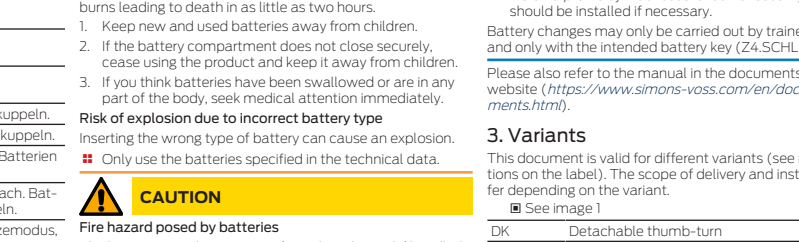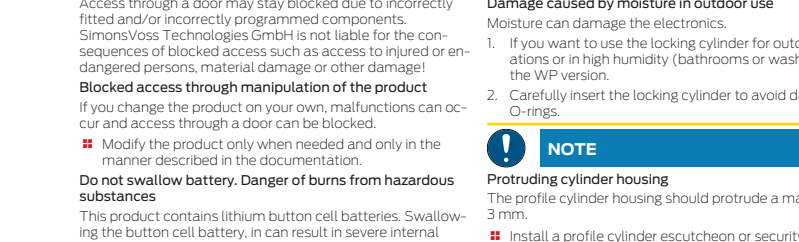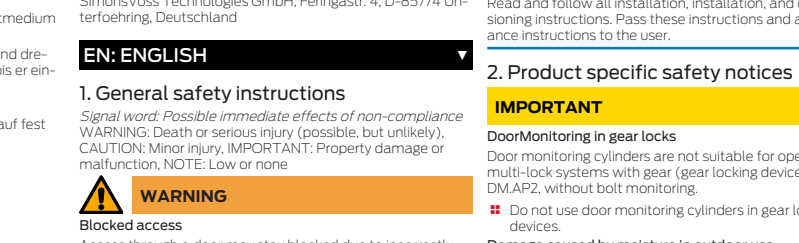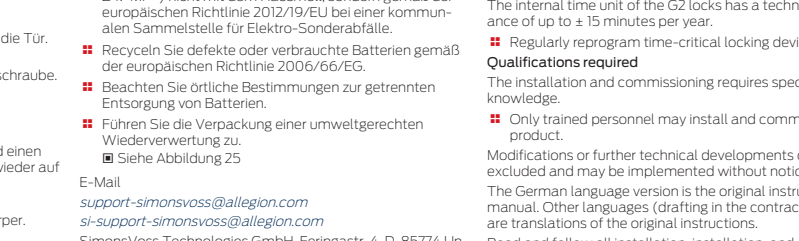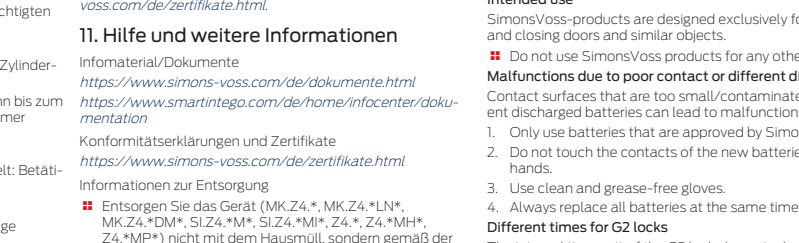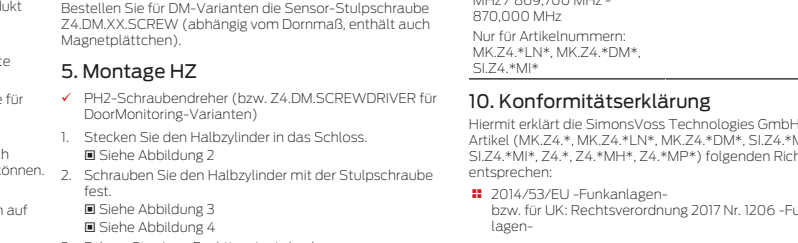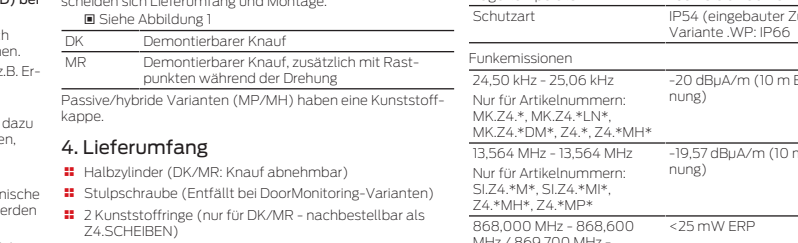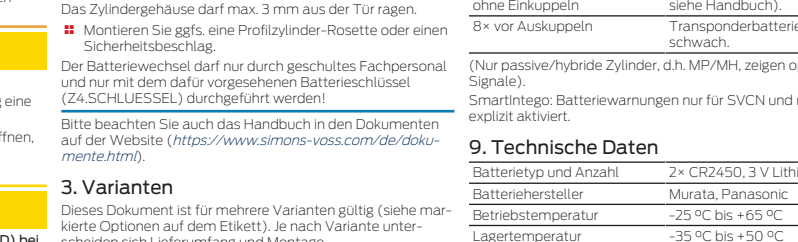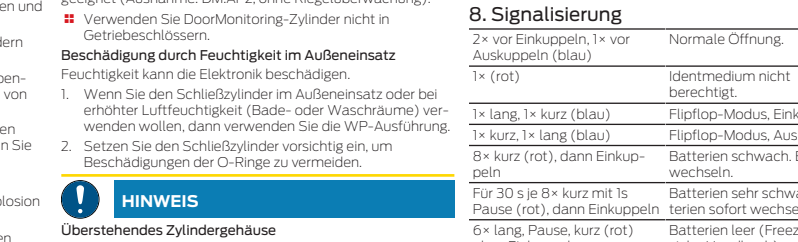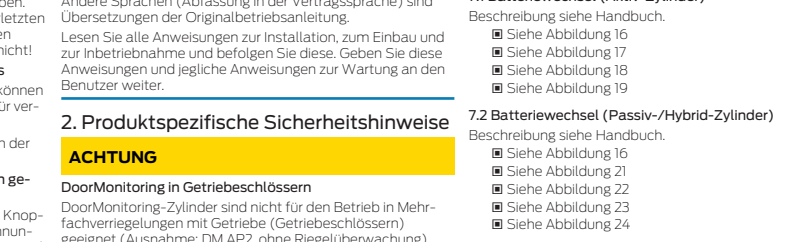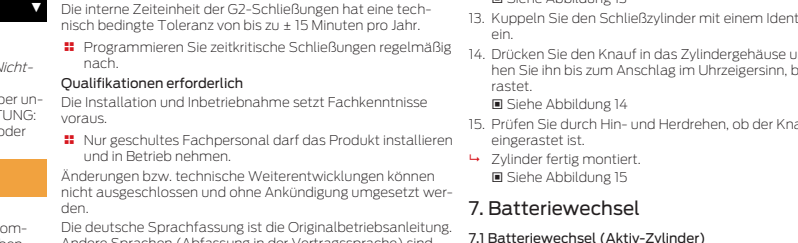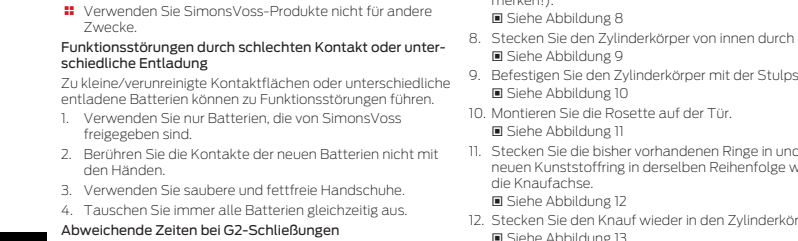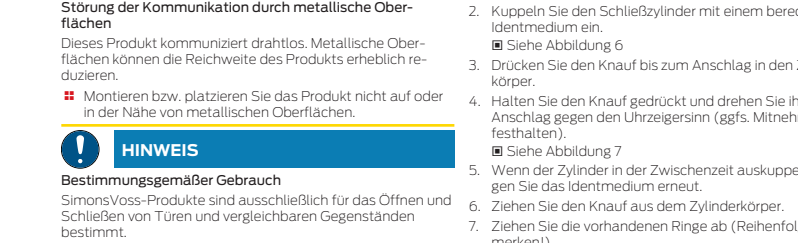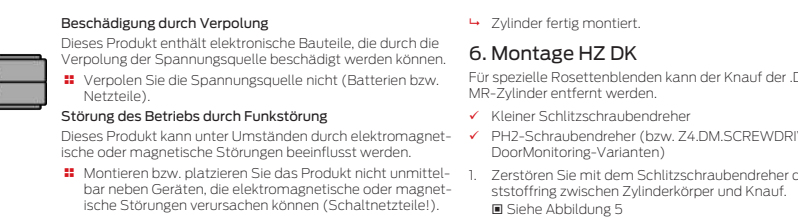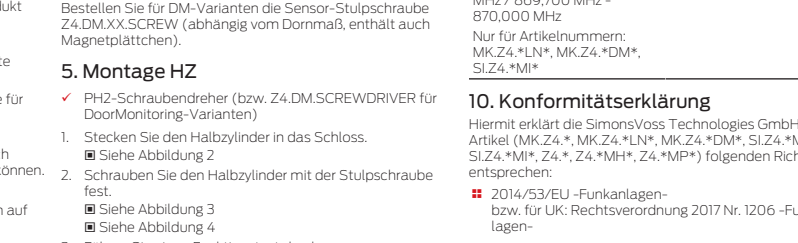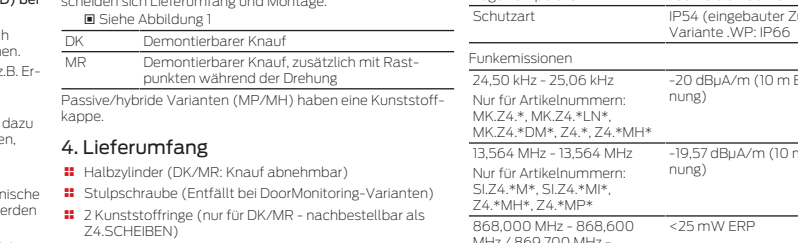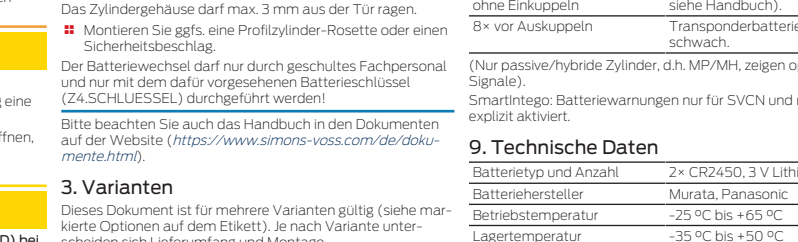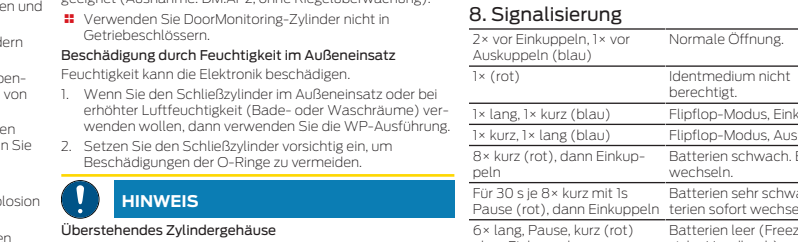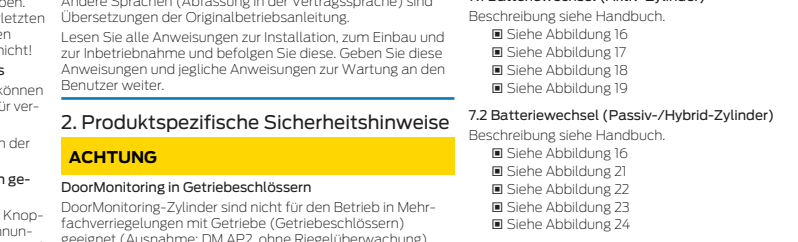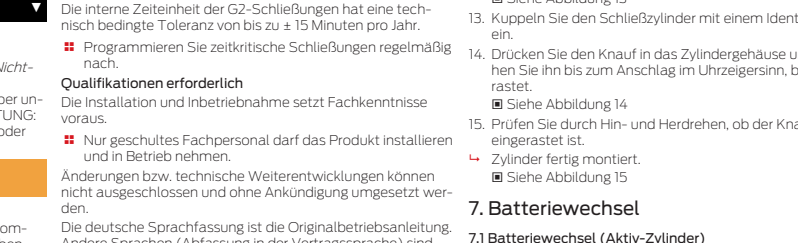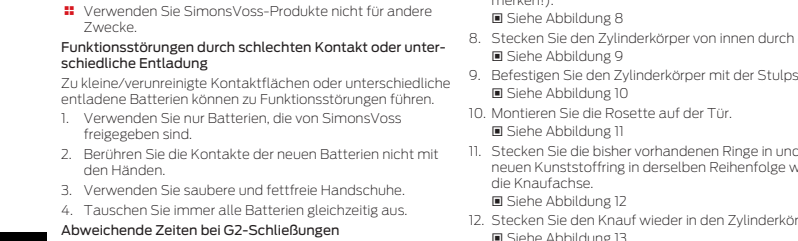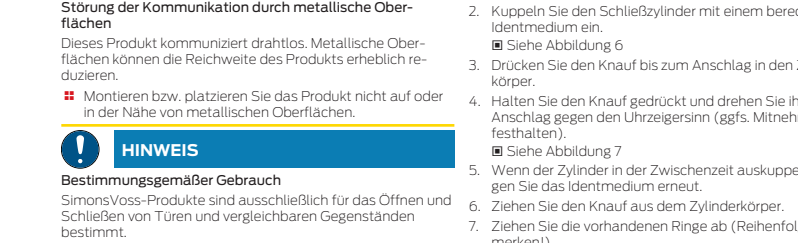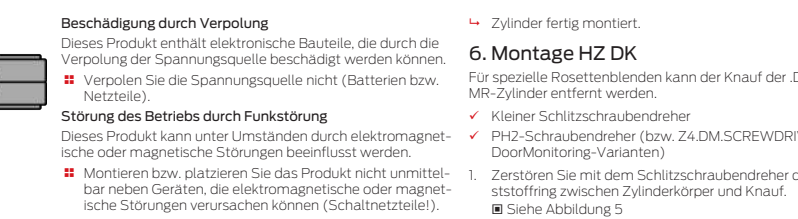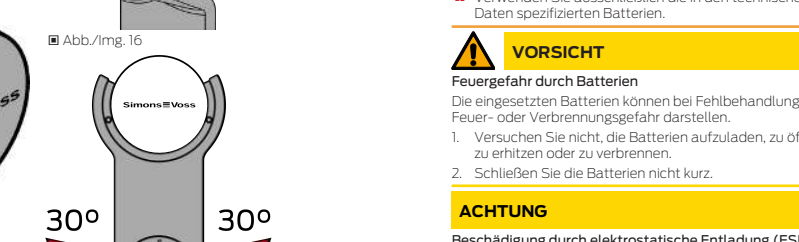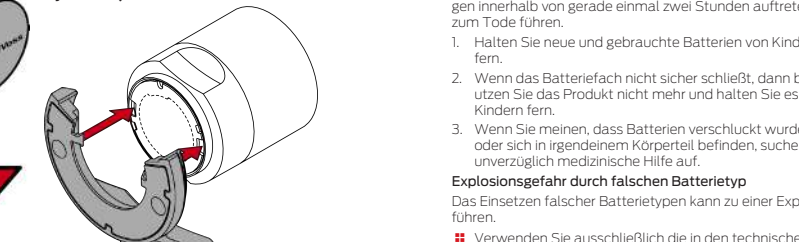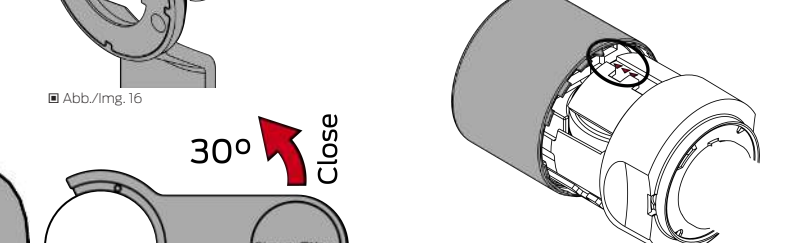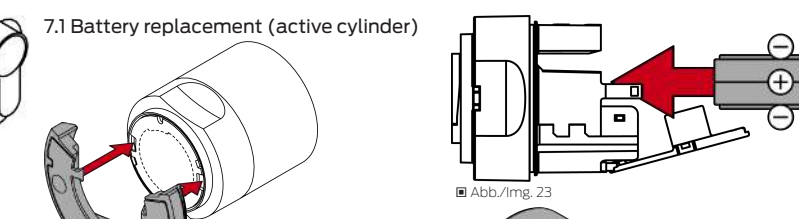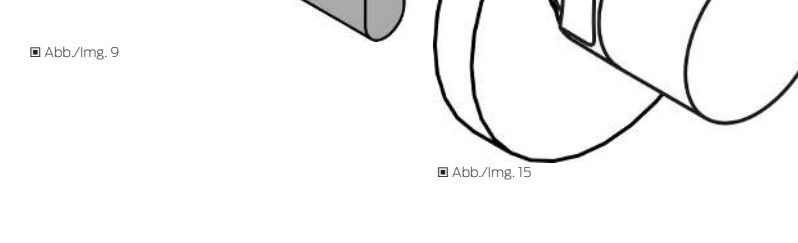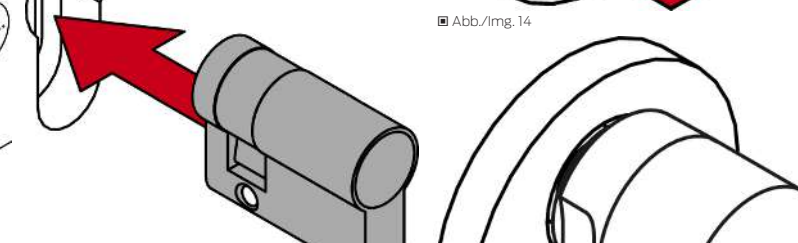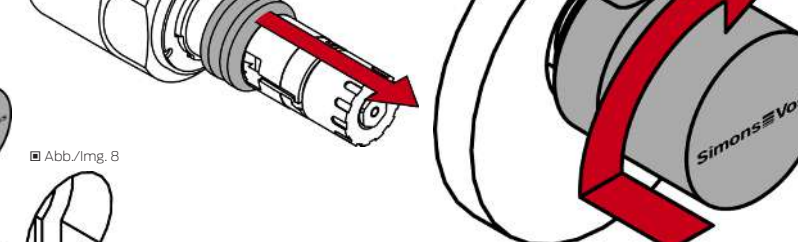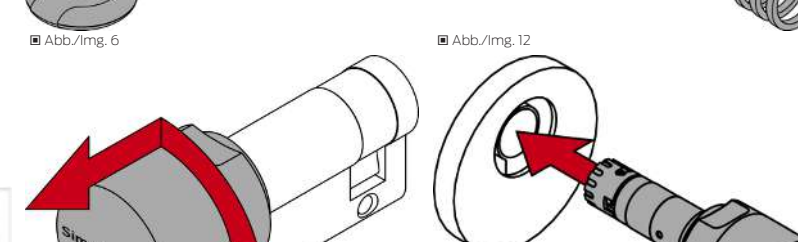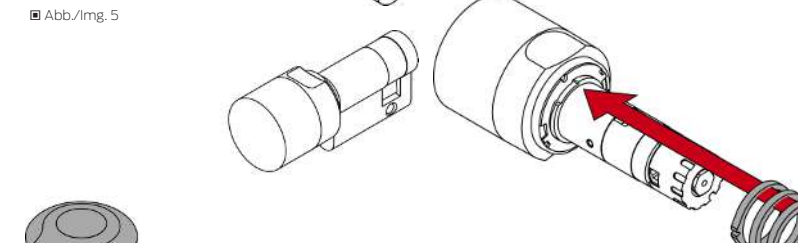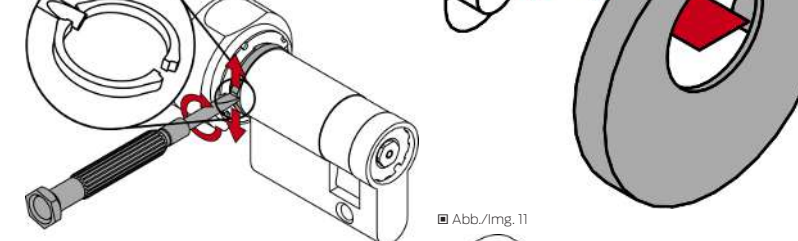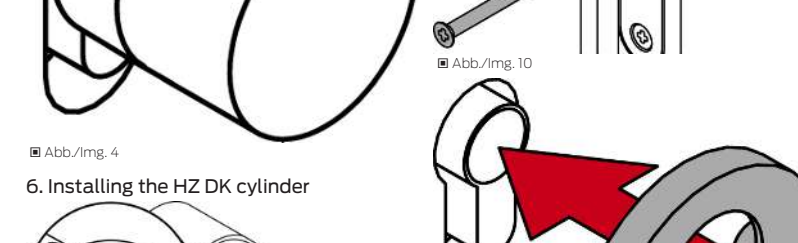                                                              

### Locking cylinder (Z4) HZ, HZ,DK/MR

Z54.0.90536  
18.09.2024

 
DE Kurzanleitung  
EN Quick guide  
FR Guide abrégé  
NL Korte handleiding  
IT Guida breve  
DK Korte vejledning  
SE Snabbguide




### 3. Variants



### 5. Installing the HZ cylinder

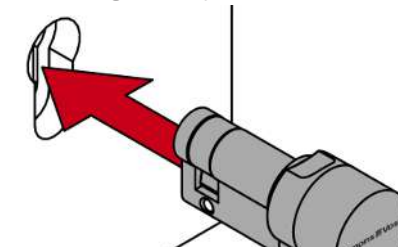

### 6. Installing the HZ DK cylinder

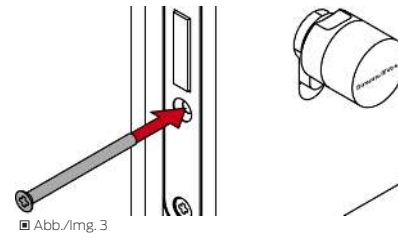 

### 7.2 Battery replacement (passive/hybrid cylinder)

